




IN-ROOM EQUIPMENT USER GUIDE

Model: EWW12753



CONTROL PANEL

Control Panel Description

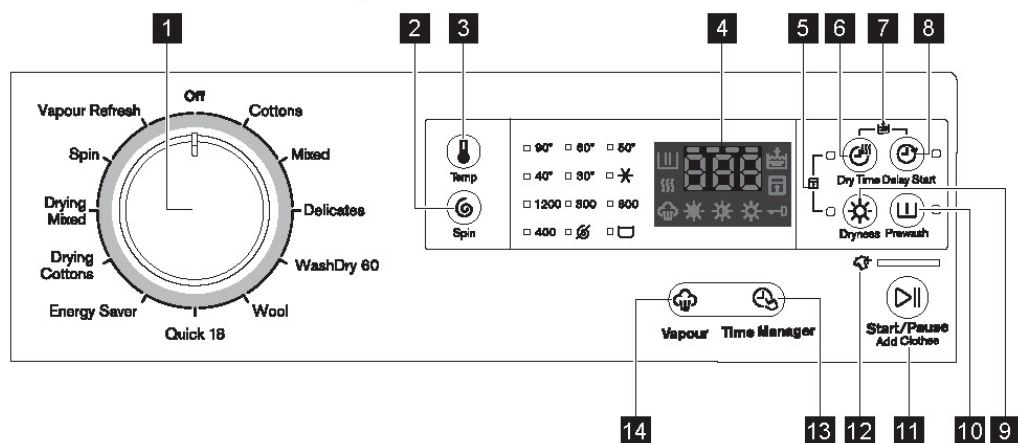

1 Program Selection Knob

2 Spin Selection Touchpad

3 Temperature Selection Touchpad

4 Display

5 Child Lock Option (see page 15)

6 Dry Time Touchpad

7 Rinse Plus Option

8 Delay Start Touchpad

9 Dryness Touchpad

10 Prewash Touchpad


11 Start/Pause, Add Clothes Touchpad

12 Add Clothes Function Symbol

13 Time Manager Touchpad

14 Vapour Touchpad

Display

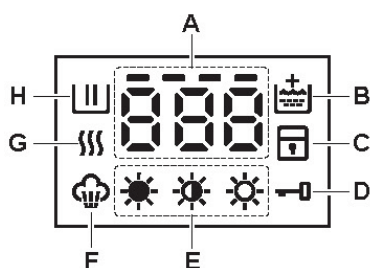

A) Digital

- Wash/Dry Cycle Time
- Delay Start Time
- The alarm codes. Refer to the chapter "Troubleshooting" for their description.
- The level of Time Manager (———).

B) Rinse Plus Icon

C) Child Lock Icon

D) Door Lock Icon

- If it is on, you cannot open the door.
- If it is off, you can open the door.

E) Dryness Level Icon

F) Vapour Icon

G) Drying Status Icon

H) Washing Status Icon

DAILY USE - WASHING (Only)

Loading The Laundry


1. Turn the water tap on.
2. Connect the main plug to the main socket.
3. Turn the knob to set a program. The washer-dryer will propose a temperature and automatically select the spin value provided for the program you have chosen.

The selector knob can be turned either clockwise or anticlockwise.

Position "Off" to reset program/ switching OFF the machine.

At the end of the program the selector dial must be turned to position "Off", to switch the machine off.

4. Check and remove objects (if there are any) that could be trapped in the fold.

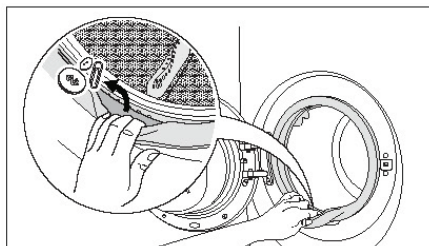


5. Place the laundry in the drum, one item at a time, shaking them out as much as possible. (Refer to page 23 "WASHING & DRYING HINTS")
6. Close the door.



CAUTION

Make sure that no laundry remains between the seal and the door.

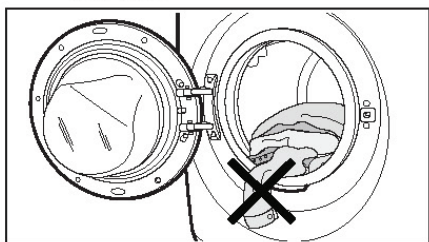


Using Detergent And Additives

i IMPORTANT: Please read "Detergents Type and Quantity of Detergent" on page 24 before use.

1. Detergent Dispenser Drawer




The detergent dispenser is divided into three compartments.

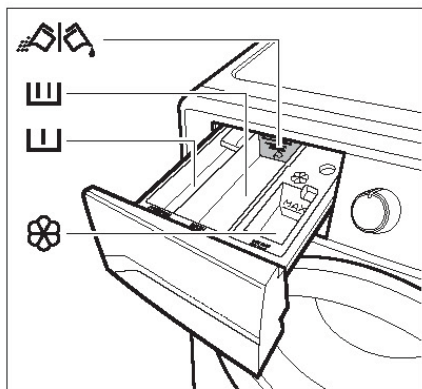

-  Compartment "MAIN WASH"
This compartment is used for detergent on all programs.
-  Compartment "PREWASH"
This compartment is only used for detergent when a Prewash is selected.
-  Compartment "SOFTENER"
This compartment is used for fabric conditioner and starching agent.

Detergent flap

Flap for powder or liquid detergent.

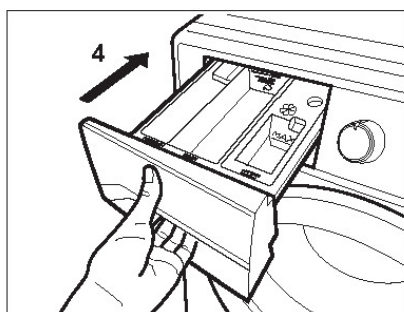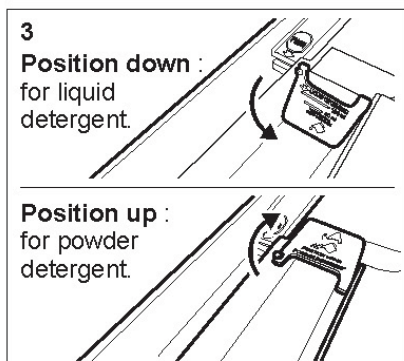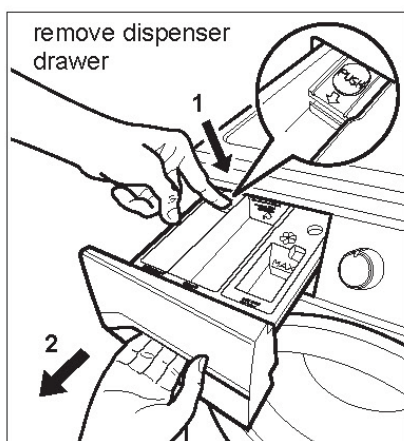


When you use the liquid detergent:


- Do not use gelatinous or thick liquid detergents.
- Do not put more liquid than the maximum level.
- Do not set the "Prewash" phase.
- Do not set the "Delay Start".

2. Measure out the detergent and the fabric softener;

- Pull out the dispenser drawer until it stops.
- Measure out the amount of detergent required, pour it into the main wash compartment.

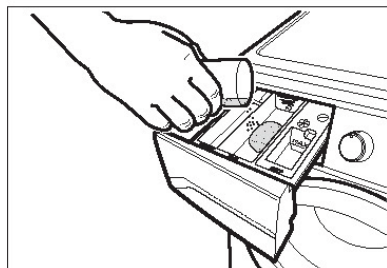

- If you wish to carry out the "Prewash" phase, pour it into the compartment marked "P".
- If required, pour fabric softener into the compartment marked "S".

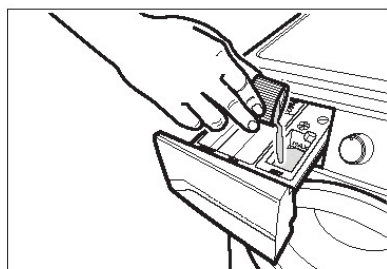

 The amount used must not exceed the "MAX" mark in the drawer.

If you use thick softeners it is recommended to dilute with water.

- Close the drawer gently.

 Residues of detergent, softener and water may remain in the dispenser. It is recommended to clean the dispenser regularly to remove any residue.

Options Setting

1. If you want your laundry to be spun or use temperature different from the one proposed by the washer-dryer, press the Spin "⦿" and the temperature "⌚" touchpads repeatedly to change the spin speed and temperature. Press the option touchpads, if you want your laundry to be washed with special functions.

NOTE

- Different functions can be combined which is dependent on the program selected.
 - If an option is not compatible with the wash program selected, symbol " --- " will flash on display along with buzzer sound.
2. If you want to adjust washing time, press the "Time Manager ⌚" touchpad repeatedly to increase or decrease washing time. See Time Manager guide on page 14.
If you want to delay the start of the washing program, press the "Delay Start ⌚" touchpad repeatedly to choose your washer-dryer delay time.

Starting A Cycle (▶▶)

To start a program, press the Start/Pause touchpad. The corresponding pilot light will stop flashing and a default program duration will be displayed on the screen.

- If you press any touchpad while a program is operating, symbol " --- " will flash on display along with buzzer sound. (except "Start/Pause" touchpad)
- If you turn the program selector knob to another program when the machine is working (except "Off" to switch off the machine), symbol " --- " will flash on display along with buzzer sound to indicate a wrong selection. The machine will not perform the new selected program.

 After approx. 15 minutes from the start of a program:

- The appliance will automatically adjust the selected program duration according to the type and size of the load.
- The display will show adjusted program duration.

Interruption Of A Program

- To pause, press Start/ Pause ▶▶ . The indicator will start flashing.
- Press the Start/Pause ▶▶ again. The program will continue.

Changing A Program

Changing a running program is possible only by resetting it.

- Turn the program selector knob to the position "Off" to cancel the program and to turn off the appliance.
- Turn the program selector knob to the new program position and change any available options. Press Start/Pause ▶▶ to start the new program.

 The appliance will not drain the water.

Changing The Options

It may be possible to change some of the options after a wash program has started.

1. Press the touchpad Start/Pause ▶▶ . The indicator will start flashing.
2. If available, change the options that you wish.
3. Press Start/Pause ▶▶ again. The program will continue.

Opening The Door

While a program or the Delay Start is operating, the appliance door is locked and the display shows the indicator "🔒". First, set the machine to PAUSE by pressing the "Start/Pause ▶▶" touchpad. Wait until the door lock indicator "🔒" goes off, then the door can be opened.

If the door lock indicator "🔒" does not disappear, this means that the machine is already heating and the water level is above the bottom edge of the door or the drum is turning. In this case the door CAN NOT be opened. If you need to open it, you must drain the water to open the door.



In case of emergency, please refer to "Emergency door opening" on page 33.

At The End Of The Program

- The appliance stops automatically.
- The acoustic signal will operate.
- The display will show "0".
- The indicator of the touchpad Start/Pause goes off.
- The door lock indicator "🔒" goes off.
- Remove the laundry from the appliance. Make sure that the drum is empty.
- Keep the door partly open, to prevent the mildew and odours.
- Turn off the water tap.



At the end of the program, the time remaining can suddenly decrease from 7 minutes or less to 0 due to the overestimated total program time during the load sensing phase. In some cases (with perfectly balanced load) the program time can be shorter than the time estimated after the load sensing phase is completed. This is a normal behavior of the machine and not a cause for concern as it does not compromise its performance.

When The Washing Program Is Completed, But There Is Water In The Drum

(Option "Rinse Hold" is used)

- The drum turns regularly to prevent the creases in the laundry.
- The indicator "Start/Pause" flashes to remind you to drain the water.
- The door lock indicator "🔒" is on. The door stays locked.

You must drain the water to open the door.

To drain the water:

1. Press the "Start/Pause ▶||" touchpad. The appliance drains the water and spins with the maximum spin speed for selected program.

Alternatively, before pressing the "Start/Pause ▶||" touchpad, you can press the "Spin 🌀" touchpad to change the spin speed. You can select "No Spin (🌀)", if you want the machine to only drain the water.

Press "Start/Pause ▶||" to start the program.

2. When the program is completed and the door lock indicator "🔒" goes off, you can open the door.
3. turn the program selector knob to the position "Off" to deactivate the appliance.



NOTE:

After approximately 18 hours, if you do not press Start/Pause touchpad, the appliance will drain and spin automatically (except for "Wool" program).

AUTO Standby Function

The AUTO Standby mode automatically deactivates the appliance to decrease the energy consumption when:

- You do not press any buttons for 5 minutes before you press "Start/Pause".
 - All indicators and the display will switch off.
 - The indicator of the touchpad Start/Pause ▶|| will flash slowly.
- 5 minutes after the washing program ends, if you do not deactivate the appliance, the energy saving function activates.
 - All indicators and the display will switch off.
 - The indicator of the touchpad Start/Pause will flash slowly.



Press any touchpad to reactivate the appliance.



Press any touchpad to reactivate the appliance.

- Display will show the end of the last wash.
- Press any touchpad again to show the last wash program.
- Turn the selector knob to set a new wash program.

DAILY USE - DRYING (Only)

1. Turn the water tap on.



The drain hose must be positioned in the sink or connected to the drain pipe.

2. Connect the main plug to the main socket.
3. Load the laundry.
4. Select the drying program, "Drying Cottons" for cotton items or "Drying Mixed" for synthetic or mixed fabric items.
5. Select a spin cycle at the maximum spin speed allowed for the type of laundry in order to obtain the best drying performance.
6. If you wish to select an automatic drying, press the "Dryness  " option until the icon corresponding to the required dryness level appears on the display. (see page 13)
7. If you wish to select a timed drying, press the "Dry Time  " option repeatedly until desired drying time reached. (see page 13)
8. Press "Start/Pause  " to start the program. The time remaining is updated every minute.

9. At the end of the program :

- The acoustic signal will operate.
- The display will show time remaining "".
- The indicator " " (drying icon) is still flashing.
- The door lock indicator () is still on.
- The appliance will perform the anti-crease phase for approximately 10 minutes.

After anti-crease phase finish, the door lock indicator () goes off. The indicator " " (drying icon) stops flashing.



If you wish to open the door during the anti-crease phase or interrupt it, press any button.

10. turn the program selector knob to the position "Off" to deactivate the appliance.
 11.  At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.
-

DAILY USE - WASHING & DRYING

NON-STOP program: Washing Program + Dryness Option

1. Load the laundry.
2. Add detergent and fabric softener.
3. Turn the knob to set a wash program you require.
4. Select the required options by pressing the relevant touchpads. If possible, do not select a spin speed lower than that proposed by the machine to avoid unnecessary longer drying time therefore saving energy.
5. Set the dryness level by pressing "Dryness ". The display will then show the whole duration of wash & dry cycle.
6. Start the program by pressing Start/Pause touchpad. The time remaining is updated every minute on the display.
7. At the end of the program turn the program selector knob to the position "Off" to deactivate the appliance.

 At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

NOTE

- If you wish to open the door during the anti-crease phase or interrupt it, press any button.
- Some drying level options are not available for some programs.
- When "Iron Dry  " option is selected, the display time will be adjusted after approximately 15 minutes from the start of the program, based on the laundry type and load size. The display will show the new adjusted time.

- When "Cupboard Dry  " or "Extra Dry  " is selected the display time will be adjusted towards the end of the drying cycle when machine senses required dryness level has been achieved. In case of laundry quantity lower than maximum load capacity, the time remaining can suddenly decrease from e.g. approximately 50 minutes to 0.

NON-STOP program: Washing Program + Dry Time Option

1. Load the laundry and add detergent and fabric softener.
2. Turn the knob to set a wash program you require.
3. Select the required options by pressing the relevant touchpads. If possible, do not select a spin speed lower than that proposed by the machine to avoid unnecessary longer drying time therefore saving energy.
4. Set the drying time by pressing "Dry Time  " touchpad repeatedly until desired drying time reached. The display will then show the whole duration of wash & dry cycle.
5. Start the program by pressing Start/Pause touchpad. The time remaining is updated every minute on the display.
6. At the end of the program turn the program selector knob to the position "Off" to deactivate the appliance.

 At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

NOTE

- If you wish to open the door during the anti-crease phase or interrupt it, press any button.
- If you set only 15 minutes of drying, the appliance performs only a cooling phase.



frasershospitality.com