




IN-ROOM EQUIPMENT USER GUIDE

Model: EMSB25XC



- 1. Door Safety Lock System
- 2. Oven Window
- 3. Roller Ring
- 4. Shaft
- 5. Door Release Button
- 6. Control Panel
- 7. Wave Guide
(Please do not remove the mica plate covering the wave guide)
- 8. Glass Tray
- 9. Grill Heater
- 10. Metal Rack

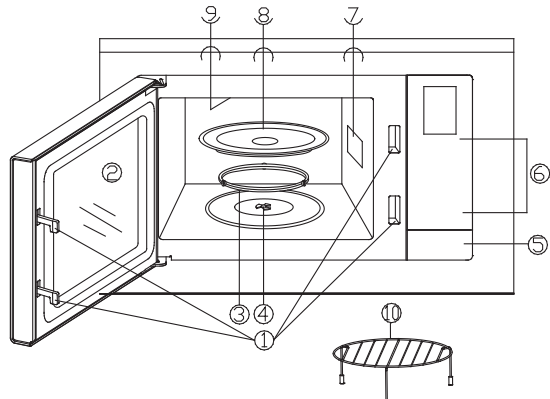

CONTROL PANEL



Button	Action	Behavior
Microwave	Quick Press	Press to set microwave cooking power level
Grill	Quick Press	Press to set grill cooking program
Combi Grill	Quick Press	Press to set microwave and grill combination cooking program
Convection	Quick Press	Press to set convection cooking program
Combi Convec	Quick Press	Press to set microwave and convection combination cooking program
+/-	Quick Press	Press to set cooking time and clock time
Auto Menu	Quick Press	Press to select auto cook menu
Clock/Weight	Quick Press	Preset to set clock time
Stop/Clear	Quick Press	Preset to set food weight or servings
		Press once to temporarily stop cooking
		or
		twice to cancel cooking altogether.
Start/+30	Quick Press	It is also used to set child lock
		Press to start cooking programs
		Press to express cooking program

Microwave cooking

1. In standby mode, press MICROWAVE button repeatedly to set power level.
2. Press +/- buttons to set cooking time. The longest time is 95 minutes.
3. Press Start/+30 button to start.

Press MICROWAVE button to set cooking power level:

Press MICROWAVE	Power (Display)	Microwave Power	Press MICROWAVE	Power (Display)	Microwave Power
Once	P100	100%	6 times	P-50	50%
Twice	P-90	90%	7 times	P-40	40%
3 times	P-80	80%	8 times	P-30	30%
4 times	P-70	70%	9 times	P-20	20%
5 times	P-60	60%	10 times	P-10	10%

NOTE: During cooking, you can check the current power level by pressing MICROWAVE button.

GRILL

The grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages or piece of chicken. It is also suitable for hot sandwiches and au gratin dishes.

1. In standby mode, press GRILL button once.
2. Press +/- buttons to set cooking time. The longest time is 95 minutes.
3. Press Start/+30 button to start.

COMBINATION

Combination 1 : 30% of whole time for microwave cooking, 70% for grill cooking.

Combination 2: 40% of time for microwave cooking, 45% time for grill cooking and 15% time the oven will stop working in one cycle.

1. In standby mode, press COMBI GRILL button once or twice to select "Co-1" or "Co-2".
2. Press +/- buttons to set cooking time. The longest time is 95 minutes.
3. Press Start/+30 button to confirm

NOTE: During cooking, you can press COMBI GRILL button to check the current Combination type.

CONVECTION

During convection cooking, hot air is circulated throughout the oven cavity to brown and make crisp foods quickly and evenly. This oven can be programmed for ten different cooking temperatures 110°C → 120°C → 130°C → 140°C → 150°C → 160°C → 170°C → 180°C → 190°C → 200°C). The longest cooking time is 95 minutes.

To preheat and cook with convection :

Your oven can be programmed to combine preheating and convection cooking operations.

1. In standby mode, press CONVECTION button repeatedly to select cooking temperature.
2. Press Start/+30 button to confirm. Beeps will sound when the designated temperature is reached.
3. Open the door and place container of food at the center of the turntable.
4. Press +/- buttons to set cooking time.
5. Press Start/+30 button to start.

NOTE: The longest preheat time is 30 minutes, and it cannot be set. When the oven reaches preheat temperature, the oven will sound beep every 5 seconds. If you don't open the oven door within the 30 minutes, the program will end automatically.

To cook with convection :

1. In standby mode, press CONVECTION button repeatedly to select cooking temperature..
2. Press +/- buttons to set cooking time.
3. Press Start/+30 button to start.

NOTE: During cooking, you can check the convection temperature by pressing CONVECTION button.

MICROWAVE + CONVECTION

This oven has one pre-programmed settings that make it easy to cook with both convection heat and microwave automatically. The longest cooking time is 95 minutes.

1. In standby mode, press COMBI CONVE button once.
2. Press +/- buttons to set cooking time.
3. Press Start/+30 button to confirm

NOTE: During cooking, you can check the convection temperature by pressing COMBI CONVE button.

SPEED DEFROST

1. In standby mode, press AUTO MENU button 9 times to select "A-9".
2. Press +/- buttons to set defrosting time. The time ranges from 10 seconds to 95 minutes.
3. Press Start/+30 button to start.

NOTE: During defrosting, the oven will pause to remind user to turn food over, after that, press Start/+30 button to resume.

MULTI - STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences.

Suppose you want to set the following cooking program:

Microwave cooking



Microwave cooking (with lower power level)

1. Input the first microwave cooking program. Do not press Start/+30 button.
2. Input the second microwave cooking program.
3. Press Start/+30 button to start.

NOTE: Auto cook menus, express cooking, convection with preheat and speed defrost cannot be set in the multistage cooking program

CHILD LOCK

Use to prevent unsupervised operation of the oven by children.

To set: In standby mode, press and hold STOP/CLEAR button for 3 seconds, the indicator light will turn on, the oven will auto enter child lock mode.

To cancel: Press and hold STOP/CLEAR button for 3 seconds, the indicator light will disappear.

AUTOMATIC PROTECTION MECHANISM

OVERHEATING PROTECTION - Digital tube has been shows "E01" and had been "DE-" alarm when the system into the super high temperature protection status. After pressing STOP/CLEAR button, the system into normal standby mode.

LOW TEMPERATURE PROTECTION - Digital tube has been shows "E02" and had been "DE -" alarm when the system enters into the low temperature protection status. After pressing STOP/CLEAR button, the system enters into normal standby mode.

SENSOR MALFUNCTION PROTECTION - In case of short circuit, the system enters into malfunction protection. The display shows "E03" and had been "DE -" alarm. After pressing STOP/CLEAR button, the oven will be back to normal.

COOK MENU

For the following food, it is recommended to use time and power for better cooking effect.

Food type	Cooking function	Power/Temperature	Weight/Share	Cooking time
Beverage / coffee	MW	100%	1 cup	1:30
			2 cups	2:40
			3 cups	3:50
Popcorn	MW	100%	100 g	2:00~3:00
Auto reheat rice	MW	100%	200 g	1:30
			300 g	2:00
			400 g	2:30
			500 g	3:00
			600 g	3:30
			700 g	4:00
			800 g	4:30
Potatoes	MW	100%	230 g	5:00
			460 g	8:00
Bake Pizza	Conv	170°C	150 g	20:00
			300 g	21:00
			450 g	22:00
Cake	Conv	140°C	475 g	50:00
Chicken	Conv combi	200°C	800 g	27:00
			1000 g	30:00
			1200 g	33:00
			1400 g	36:00

AUTO COOK

For the following food or cooking mode, it is not necessary to program the cooking power and time. It is sufficient to indicate the type of food that you wish to cook as well as the weight or servings of the food.

1. In standby mode, press AUTO MENU button repeatedly to select food code.
2. Press CLOCK/WEIGHT button repeatedly to set food weight or servings.
3. Press Start/+30button to start.

Auto cooked menus:

Menu	Weight/Share	Display	1. For Chicken, during cooking, the system will pause to remind you to turn food over for uniform cooking. After that, press Start/+30button to resume 2. The result of auto cooking depends on factors such as fluctuation of voltage, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.
 Chicken	800 g	800 g	
	1000 g	1000 g	
	1200 g	1200 g	
	1400 g	1400 g	
 Popcorn	99 g	99 g	
 Milk/Coffee	1 cup	1	
	2 cups	2	
	3 cups	3	
 Potato	1	1	
	2	2	
 Spaghetti	100 g	100 g	
	200 g	200 g	
	300 g	300 g	
 AutoReheat	200 g	200 g	
	300 g	300 g	
	400 g	400 g	
	500 g	500 g	
	600 g	600 g	
	700 g	700 g	
	800 g	800 g	
 Pizza	150 g	150 g	
	300 g	300 g	
	450 g	450 g	
 Cake	475 g	475 g	



frasershospitality.com